



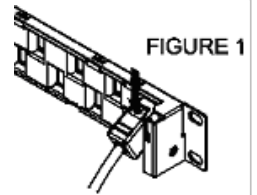


1. Insert the Jack into the opening in the Patch Panel at an angle with the non-flexing side of the keystone latch facing down.

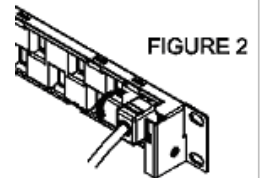


2. With the bottom latch engaged to the Patch Panel, push the Jack upward until the flexing side of the keystone latch engages with the Patch Panel as shown in figure 2. There should be a slight clicking sound as the latch engages.



3. Insert the cable support tray into place.

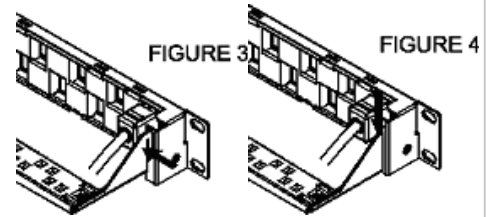

4. Make sure the cable support tray is connected properly on both sides of the panel.

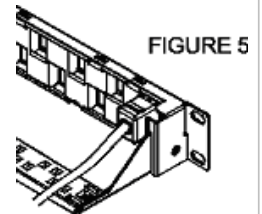

6. Use tie wraps hold the cables in place. Do not over tighten the tie wraps so no damage is caused to the cables.

