



HES Cabling System

Installation Manual for HCS Shielded Keystone Jack
HCS P/N J6E-00826 CAT 6 KSJ (Universal Wiring) with F/FTP or S/FTP Cable
HCS P/N J6A-00823 CAT 6A KSJ (Universal Wiring) with F/FTP or S/FTP Cable



1 Remove ~ 5 cm of the cable jacket




2 F/FTP Cable: Carefully remove the overall foil shield. Make sure the drain wire remains intact.
S/FTP Cable: Pull back the braid shield and twist it into a single bunch.



3 Carefully remove the individual foil shields from all 4 pairs.





4 Carefully insert the metal shield fin under the jacket.

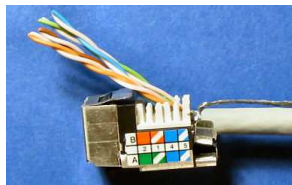


5 Punch-down the Blue and the Green pairs (T568B).

6 Punch-down the Orange and the Brown pairs (T568B).


Make sure all pairs are tightly twisted up to the termination point.

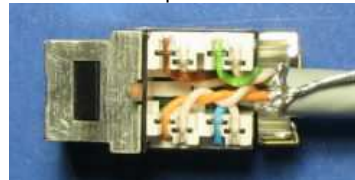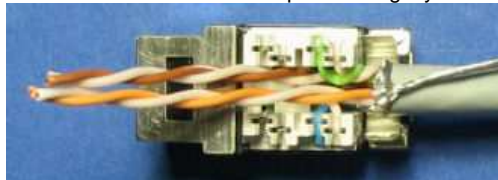

7 Click the dual stuffer cap into place. Verify that all wires are punched down properly.

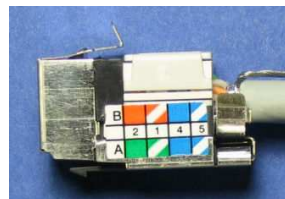

8 Wrap the drain wire around the metal ribs and strap the cable with the ribs tightly using a tie wrap (included).

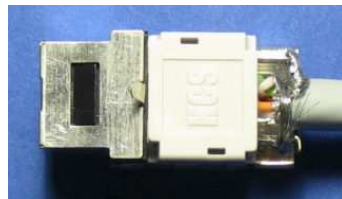

9 Slide the metal shield into place, close the back cover and fold the fin properly.

