


Step 1

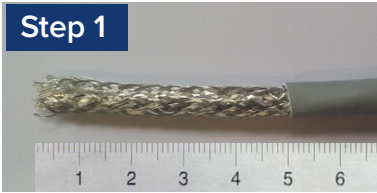


Remove 5 cm of the cable jacket.

Step 2



Fold back the braid shield.


Step 3

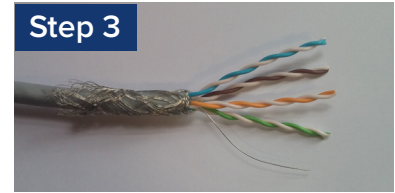

Carefully remove all foil shields.


Hold the wiring block with the colored side up and insert the pairs into place as shown below

Step 4

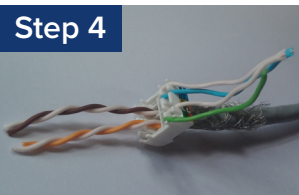


Insert the wires into the correct colored slots.

Step 5

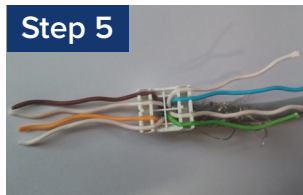


Step 6

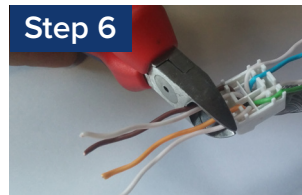

Cut the wires flush with a sharp tool.

Step 7

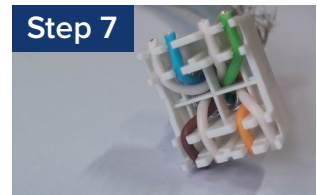

Step 8




Slide the wiring block into the the jack housing with the colored side down and push gently with your thumb. Note the guide and the IDC contacts.

Step 9



Step 10

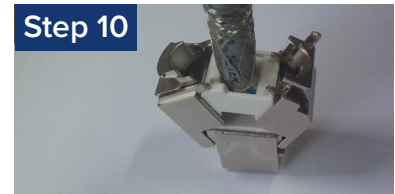

Fold up the side caps. Press the side caps firmly until they click and make sure both caps are securely closed.

Fix the cable tie to the shielding lug. Insert the grounding wire into the grounding bar.

Step 11




Step 12



Step 13



Step 14

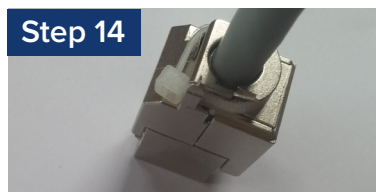

Ready

Note: Avoid damaging the cable when using the pliers and make sure the braid shield is in good contact with the keystone jack shield.