



HES Cabling System

Installation Manual for Shielded Slim-Body Keystone Jack
HCS P/N J6E-00826 CAT 6 KSJ (Universal Wiring) with CAT 6 F/UTP Cable
HCS P/N J6A-00823 CAT 6A KSJ (Universal Wiring) with CAT 6A F/UTP Cable




1 Remove ~ 5 cm of the cable jacket




2 Carefully remove the foil shield. Make sure the drain wire remains intact.



3 Carefully remove the plastic tape, cut the cross-separator and fold back the drain-wire.

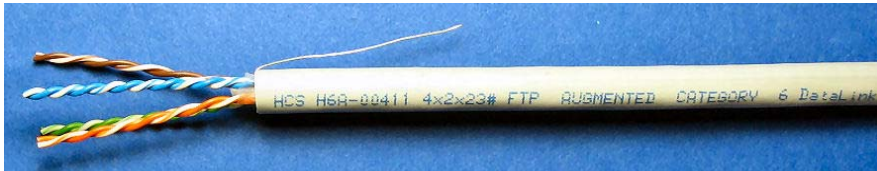



4 Carefully insert the metal shield fin under the jacket and under the aluminum foil shield.

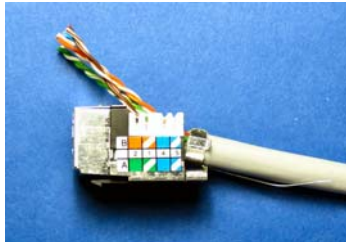


5 Punch-down the Blue and the Green pairs (T568B).

6 Punch-down the Orange and the Brown pairs (T568B).

Make sure all pairs are tightly twisted up to the termination point.

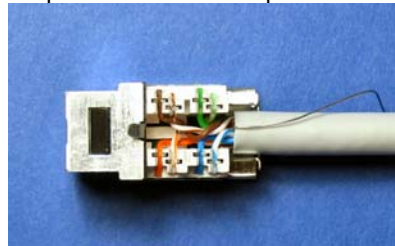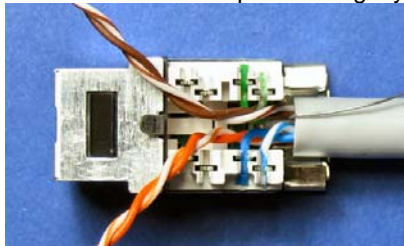

7 Click the dual stuffer cap into place. Verify that all wires are punched down properly.

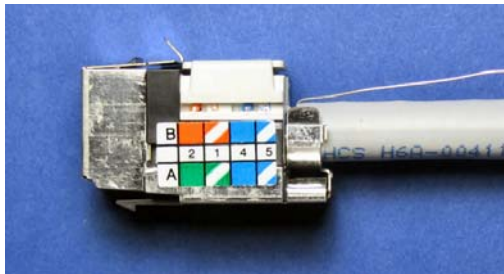

8 Wrap the drain wire around the cable under the metal ribs and strap the cable with the ribs tightly using a tie wrap (included).



9 Slide the metal shield into place, close the back cover and fold the fin properly.

