





**Installation Manual for Category 6E Unshielded Keystone Jack
HCS P/N J6E-00813 - Universal Wiring - UTP Cable**


1 Remove 4-5 cm of the cable jacket. Avoid damaging the wires insulation.

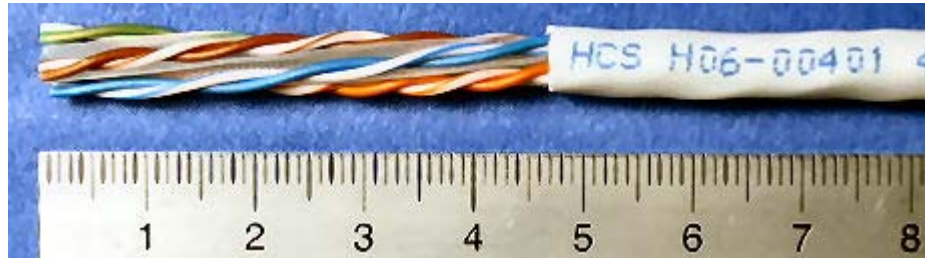


2 Carefully cut the central filler. Avoid cutting any of the wires.

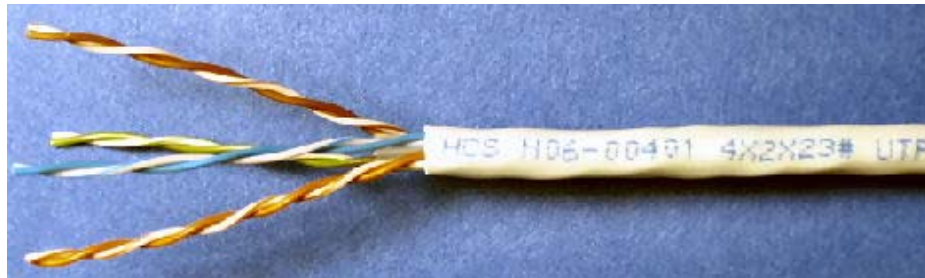

3 Punch down the wires into the correct colored slots, starting with the inner pairs (Orange & Brown in T568B)

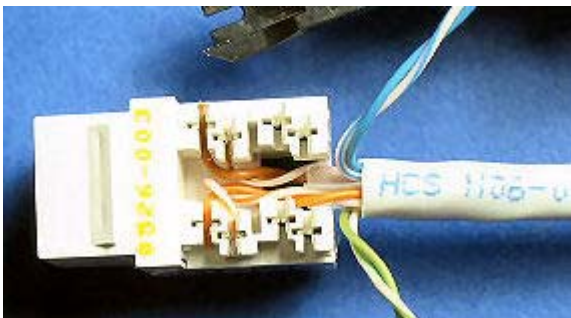


4 Punch down the remaining pairs. Avoid damaging the wires with the punch-down tool.

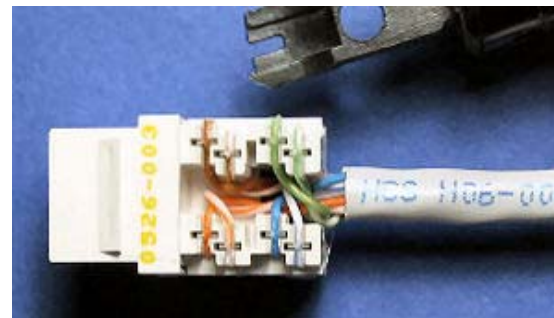


Notes:

Keep the unjacketed portion of cable as short as possible.
Keep the wires of each pair tightly twisted up to the point of termination.
T568B pair/pin assignment is recommended.

5 Check and verify that all wires are punched as down as possible. In case of need use a tool to ensure good IDC contact.

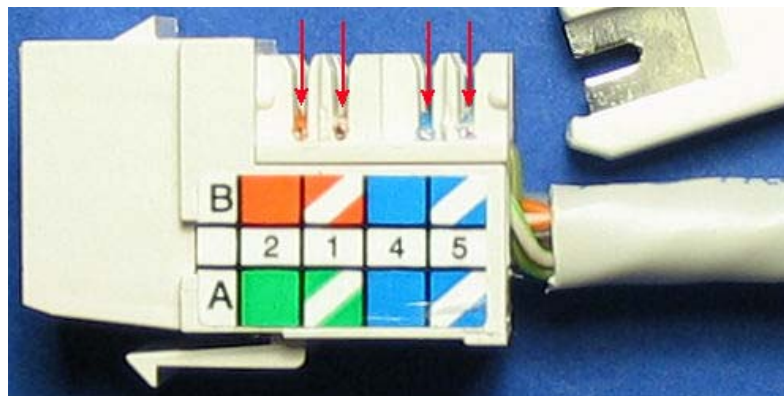

6 Mount the protective covers tightly into place and make sure they are pressed all the way down.

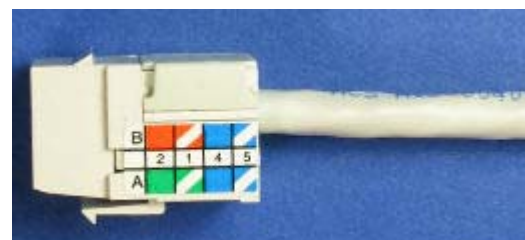

Note: Avoid bending the cable sharply at the point of entry when the keystone jack is snapped into place.